

All console nds/nds1/nds2 under 1.41 can use for upgrading r4 i gold.


1 To download the "NDS\_Update\_1.4.1\_R4.nds" into the TF card root directory, then open the NDSI console,press "A" button to enter the "GAME" directory.




2 Select "NDS\_Update\_1.4.1\_R4.nds", press "A" to enter the upgrading procedure.



- 3 Press "START" to start upgrading.

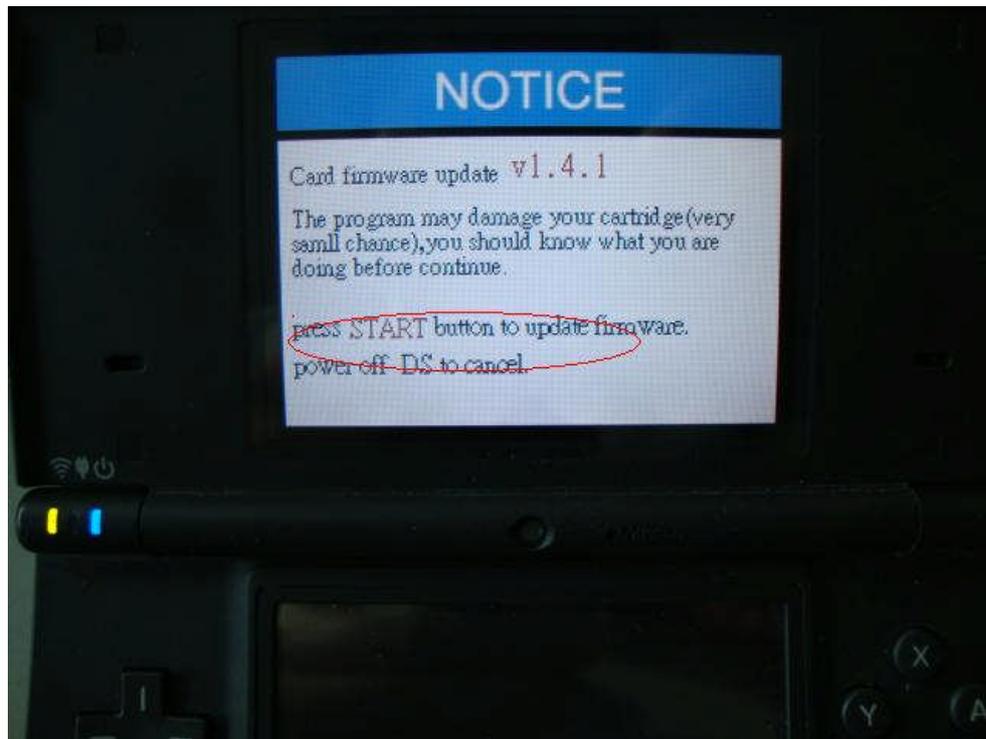

- 4 Upgrading Process....

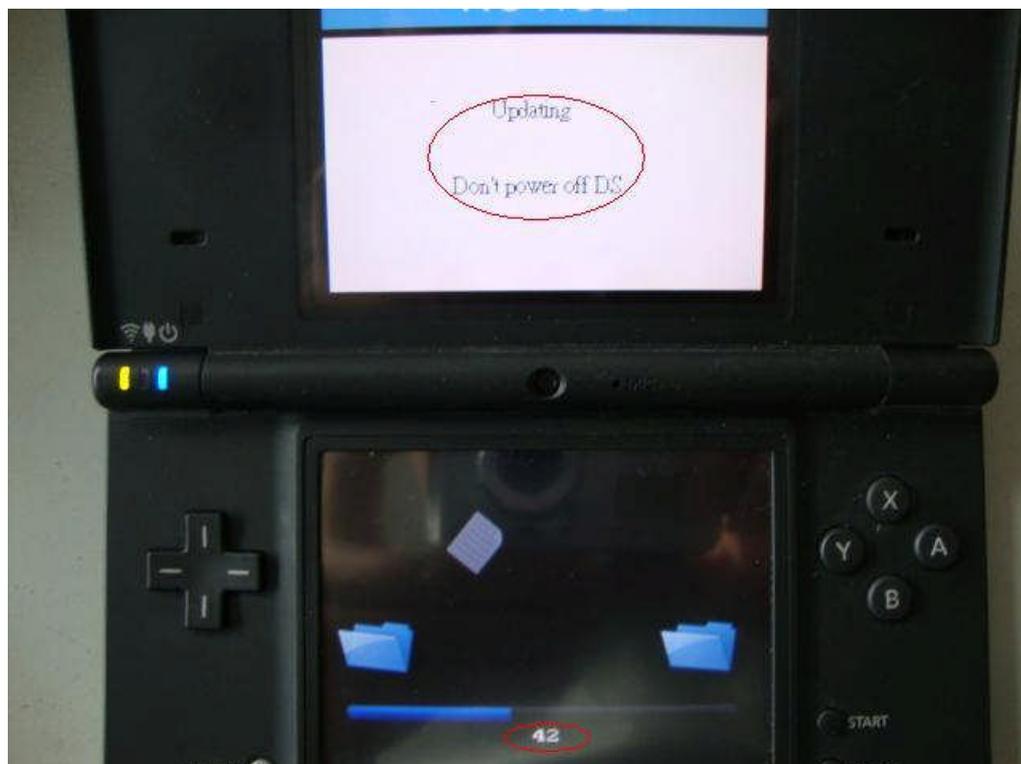

5 Upgrading completed, power off the ndsi conosle .Now r4 I gold had upgraded to 1.41 version successfully, can work with the ndsi 1.41 console .

